

Installation and Operating Instructions

Stahl 2-Point Static-Safety Belt Type 1020


Lap Belt For Rear Seats

Approval No. B E4-16R-0419075

Installation Instructions:

Please refer to the operating instruction of your vehicle, where the two standard attachment points (thread 7/16" UNF) for the safety belt are. Depending on the vehicle type, they are located behind the backrests on the wall to the boot or engine compartment, in the middle or right and left side under the seat.

Punch through any cover and fix the fixation parts according to Fig. 1

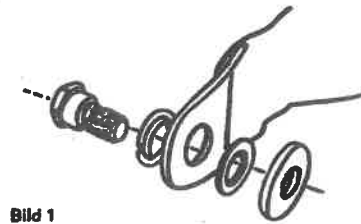

Operating Instructions:

- Position of the buckle head:** should be max. at hip height (hip bones) and on side of the body
- Tightening of the belt:** by pulling the upper webbing of the tongue
- Loosening of the belt:** by pulling the lower webbing of the tongue
- Fasten the seat belt:** insert the buckle tongue into the buckle head until it audibly clicks into place.
- Opening the seat belt:** by pressing the red press button on the lock head, the tongue jumps out of the lock head
- Cleaning:** occasional washing with a sponge, warm water and pure soap keeps the belt clean. Do not use any chemicals, bleach or dyes, as these will affect the quality of the belt.

No changes may be made to the safety belt, otherwise the proper functioning of the system cannot be guaranteed.

Important notes:

- use is only intended for one person (children from 6 years)
- In the interest of your safety, we ask you to fasten your seatbelt before each journey.
- Make sure that the seat belt is not installed or applied in a twisted position and never rub against sharp edges of the seat or the interior of the vehicle.
- Seatbelts that are cut, with incomplete seam/stitches, frayed, damaged or from vehicles with an accident must be replaced.
- We recommend having the anchorage points checked in a specialist workshop after an accident.
- Check occasionally whether the screws are tightened properly.
- The safety belt webbing must be tight at the body and run in the groin.

Under no circumstances should it run over the abdomen!!!!!!

Carl Stahl GmbH&Co.KG Weaving Mill Anhauser Str. 7 D-89542 Herbrechtingen
phone: +49 (0)7324-9604-0 e-mail: info@stahl-gurte.de